



12' PULSING VALVE TECHNICAL DATA

AASF PVT LIMITED Shanghai AASF Technology Co.,Ltd 上海焊思环保科技有限公司 134B-501,No.38 Gujing Rd, hong san industrial area, shanghai,China,200336. 电话: 86-21-54019615,19901761915

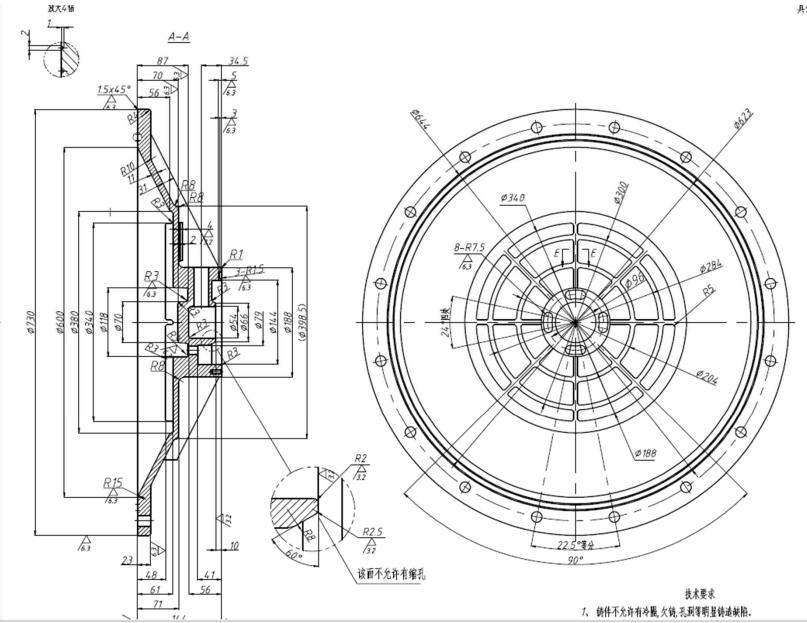


具涂: ∀


RELATED 12' DIAPHRAGM KIT

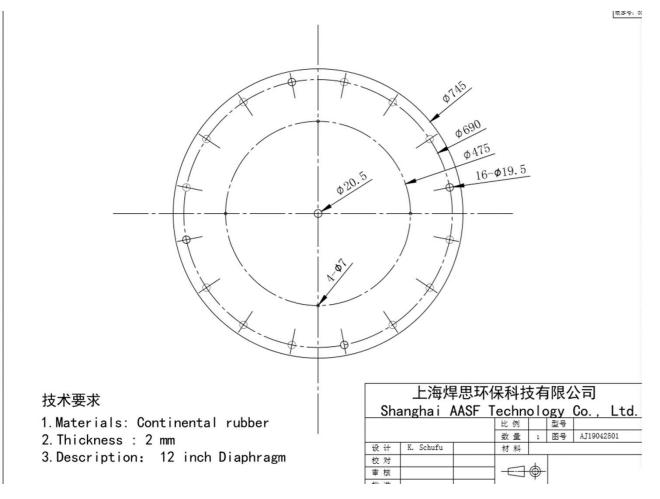



INSTALLATION DATAS

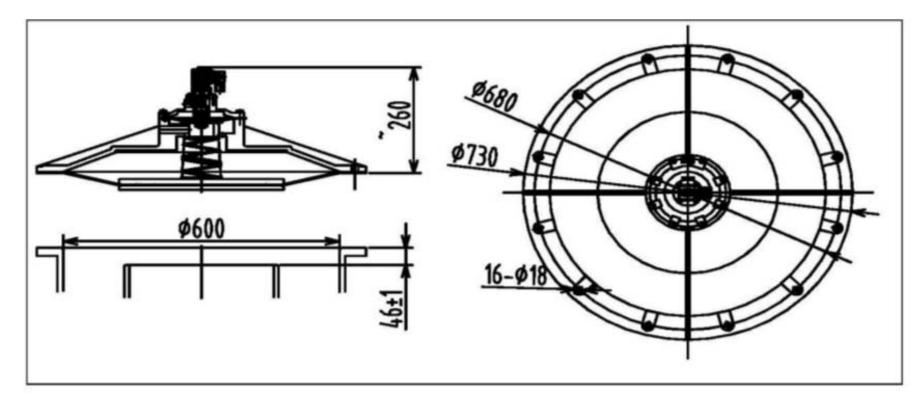


12" VALVE

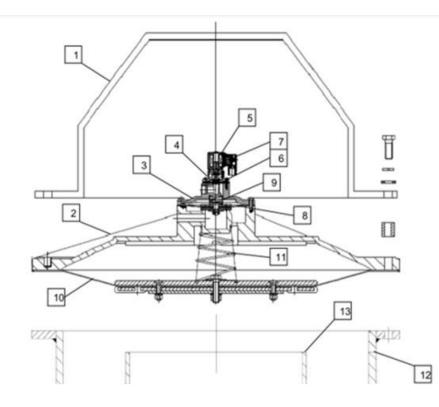

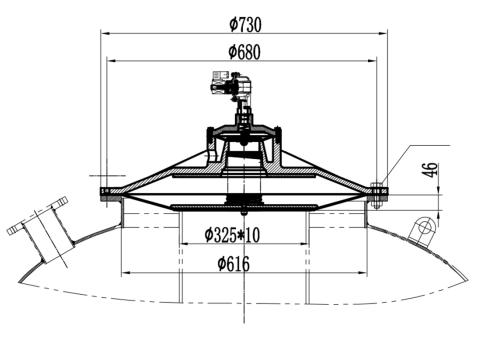

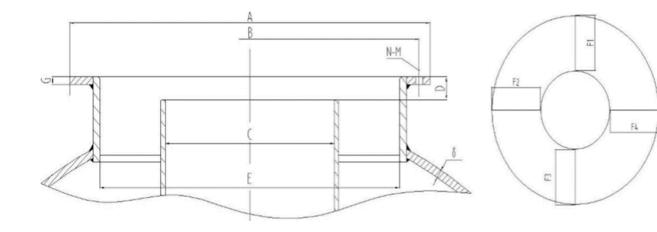

Name	air tank	air tank	Installation dimension									
	No.	capacity	Α	В	Pipe	С	D	E	F1	F2	F3	F4
Pulse valve for 12-inch rotary bag dust collector (large valve)		(m3)			diameter							
	A	1.5	735	680	Inner	310	45~46	600	135	140	142	138
					Outer	325						
	В				Inner							
					Outer							
	С				Inner							
					Outer							
	D				Inner							
					Outer							
	E	1.5	735	690	Inner	310	43~47	600	137	135	139	140
					Outer	325						
	F				Inner							
					Outer							
	G	1.5	735	680	Inner	310	44~46	600	135	140	140	136
					Outer	325						
	Н				Inner							

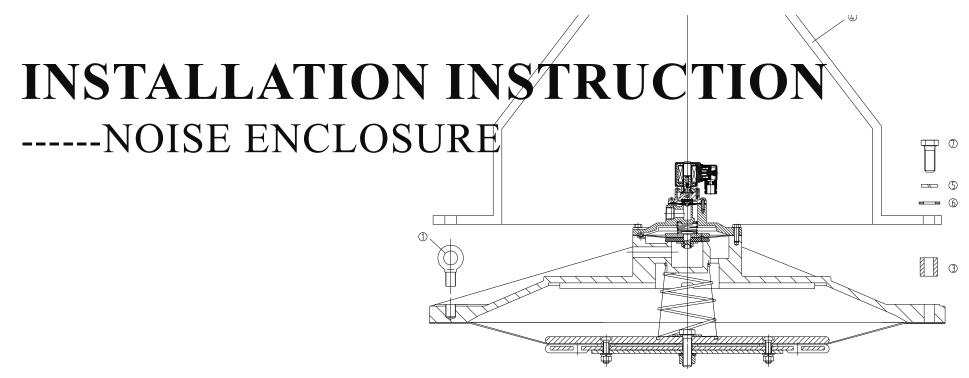

Lifting eye bolt $\times 2$ (2)16-M16 (3)Aluminum tube $\times 4$ (4)Noise enclosure

(5)4-M12S spring washer (6)4-M12 flat washer (7)4-M12 bolt

Installation of 12" Valve and Noise Enclosure:

(1) Take out the parts and accessories of noise enclosure, valve deck, diaphragm components from the wooden box;

- (2) Screw 2pcs lifting eye bolts ① into the screw holes of valve deck, and lift the valve deck, mount the diaphragm component,
- (3) spring and valve deck in sequence, then tighten bolt⁽²⁾ in diagonal manner.
- (3) After meeting the requirements through debugging, screw out lifting eye bolts(1), pad aluminum tube(3),
- (4) mount noise enclosure④, place spring washer⑤&flat washer⑥, then tighten bolt⑦.